Heating event indicator

Time display

Day of the weeknumber

Menu Button

Arrow Buttons

88:88

▸1 2 3 4 5 **6 7** 〰 🔒

📖 ▲ 🕒 ▼ ⏻

Manual mode
Clock controlled programme mode

Key lock
Heating on

On/Off Button

① With this weekly timer, It is possible to set 6 individual on/off heating events per day which can be copied for all 7 days or you can have days 1-5 the same with a different schedule for the weekends. Factory settings are programmed for 3 heating events to obtain 6 you will need to set up the program by following the advanced settings information .You can also select the **permanent "manual override mode"** or the **single event "comfort mode"**. The timer switch is recommended for using together with a mechanical thermostat & the wiring box H-Box12.

Function

On/Off

To turn timer switch on or off, press ⏻ button.

Set day of the week and the time

Press 🕒 button for 5 seconds until the day starts blinking, use the ▲ or ▼ button to set the day, press the 🕒 button to confirm the setting and the hours will start blinking, use ▲ or ▼ press 🕒 button to confirm the setting and the minutes will start blinking,

use ▲ or ▼ to set the minutes, press 🕒 to confirm. The timer will return to normal working.

🕒 Clock controlled programme mode

The timer has the facility to operate 6 on and 6 off heating events. Factory settings provide the popular 3 on and 3 off combination. Press the menu button 📖 until the clock 🕒 symbol appears. The timer will now automatically operate according to the Factory programmed settings.

👋 Manual override mode

When the clock 🕒 symbol is showing the programmed timer on and off cycles are automatically controlled.

To override and gain manual control press the menu button 📖 until the hand 👋 symbol appears.

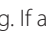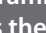The timer is now in manual control. Press ▲ to turn the floor heating manually on/off.

Single period manual override "comfort mode"

You can change from automatic to manual control for a single period, ONLY when the clock symbol is showing. Press ▲ or ▼ and the hand 👋 symbol will appear alongside the clock 🕒 symbol. Press ▲ again and the heating symbol will appear or disappear. The timer will reset to auto mode at the next heating event.

🔒 Key lock function

Once the timer has been set, press both the ▲ and ▼ buttons together for 5 seconds to display 🔒. Timer is now locked. Repeat these steps to unlock the timer.

Programming: 6 heating events Daily/Weekly Timer

Press the menu 📖 button for 5 seconds to start the programming. If a time is showing already, this is the factory setting. To unset press the clock 🕐 button, the symbol " - - : - - " will appear. The symbol " - - : - - " means that the time period is not programmed. Press the clock 🕐 button and an ON time will appear for period 1. The hours and minutes can be changed using the ▲ and ▼ buttons. Then press the menu 📖 button again to set the OFF time for period 1. The hours and minutes can be changed using the ▲ and ▼ buttons. Press the menu 📖 button again to work through each of the time periods as above. Note - for any time periods not set on and off to " - - : - - "

If you have selected 5/2 (Monday to Friday and weekend) you will first programme time periods for Mon-Fri (1-5) and then weekend (6 & 7). Note there are just 2 time periods for weekend setting ☼ and ☾

(2)

Advanced Settings

To enter the advanced setting TURN THE THERMOSTAT OFF BY PRESSING ON / OFF ⏻ BUTTON BEFORE STARTING.

Then press the menu button 📖 and on/off button ⏻ simultaneously, switching on the thermostat to enter into the advanced settings mode.

In this mode the clock can be set to '5 / 2' (Mon-Fri & Weekend), '6 /1' (Mon-Sat & Sun) OR '7' day (Mon-Sun). Press ▲ or ▼ to select option required.

To leave the Advanced Settings program, press ⏻ and the timer will return to normal.

Programming: 6 event Daily/Weekly Timer
Press the 📖 button for 5 seconds to start programming

Button	Heating Event	Symbol	Time	▲ ▼	Heating Mode
📖	1	☼	06.00		ON
			08.00		OFF
	2	🏠	- - : - -		ON (unset)
			- - : - -		OFF (unset)
	3	🏢	11.30		ON
			12.30		OFF
	4	🏢	- - : - -	Set programme time	ON (unset)
			- - : - -		OFF (unset)
	5	🏠	17.00		ON
			22.00		OFF
	6	☾	- - : - -		ON (unset)
			- - : - -		OFF (unset)
🖐	1	☼	08.00		ON
			23.00		OFF
	2	☾	- - : - -		ON (unset)
			- - : - -		OFF (unset)

Day 1-5 spans events 1–6; *Day 6/7* spans events 1–2.

Tech support opening hours are subject to change - please visit our website for the latest information