


WUNDA 


Welcome to WundaSmart

Welcome to your Smart Screenless Thermostat

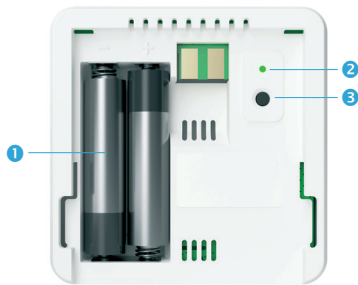


- 1 2 × AAA Alkaline Battery
- 2 Pairing LED
- 3 Pairing Button
- 4 Terminal for attaching optional floor probe
- 5 Wall mounting holes for 2 × screws (5×30 mm or 4×20mm)

Open the app, install & use

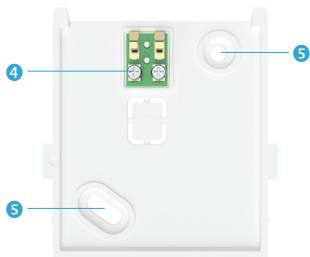

Quick install guide

- A. Put the batteries into the compartment
- B. Launch your App and choose the **Room** where you want to add your Smart Screenless Thermostat.
- C. Press **Add Screenless Smart Thermostat** button in your app, then press **+** to pair
- D. For the best results, we recommend mounting the screenless thermostat to the wall out of direct sunlight.

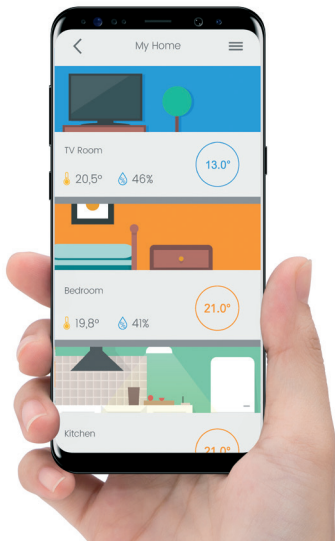

WUNDA Smart ScreenlessThermostat

Technical Specification

Nominal supply voltage	2×1.5V – alkaline battery LR03 (AAA)
Radio communications	869.85 MHz, two-way
Radio coverage	up to 500 m in an open area
Maximum transmit power	< 5 dBm
Antenna:	yes (built in)
Operating temperature range:	5°C to 45°C (excluding condensation)
Temperature measurement resolution:	0.1°C
Temperature measurement accuracy:	±0.3°C
Humidity measurement range:	0% to 100%
Humidity measurement accuracy:	±3% for 20 – 80% humidity, ±5% in the remaining range
Humidity measurement resolution:	±1%
Degree of protection	IP 20
Dimensions	66 × 66 × 18 mm
Weight	43 g

EU Declaration of Conformity

This device is in compliance with essential requirements and other relevant provisions of the following EU Directives:

- RED Directive 2014/53/EU
- RoHS Directive 2011/65/EU

A copy of the EU Declaration of Conformity is available at: wundasmart.com/conformity



Safety information

Batteries

Batteries may explode or leak and cause burn injuries if: recharged, disposed of in fire, mixed with different battery types, inserted backwards or disassembled.

Replace all used batteries at same time with an identical, unused model.

Do not carry batteries loose in your pocket or purse.

Do not remove battery label.

Keep batteries away from children.
If swallowed, consult a physician at once.

Mounting

Don't mount device 2 m above the floor level.

Cleaning

Use only a dry, soft cloth for cleaning. The use of water or organic solvents is prohibited.

The WEEE symbol means that a device must be disposed of separately from general household waste. When a device reaches the end of its life-span, it must be taken to a designated waste collection point for safe disposal or recycling. This conserves natural resources, protects human health and helps the environment.



Manufacturer

WundaGroup PLC
Caldicot, NP26 5AD
United Kingdom
www.wundasmart.com

Need our help?

Our designated support staff
are on hand to answer all your
questions

help@wundasmart.com

0800 083 2677